SleepMat

INSTRUCTIONS FOR USE

1.

For inflating the pillow open the double plug on the lower part of the pillow and pull out the T-shaped silicone cap from it.

Then close the lower part of the plug (the upper part remains open) and start inflating the pillow.

2.

